


RTR-E 7799

This thermostat should only be installed by a licensed electrician.

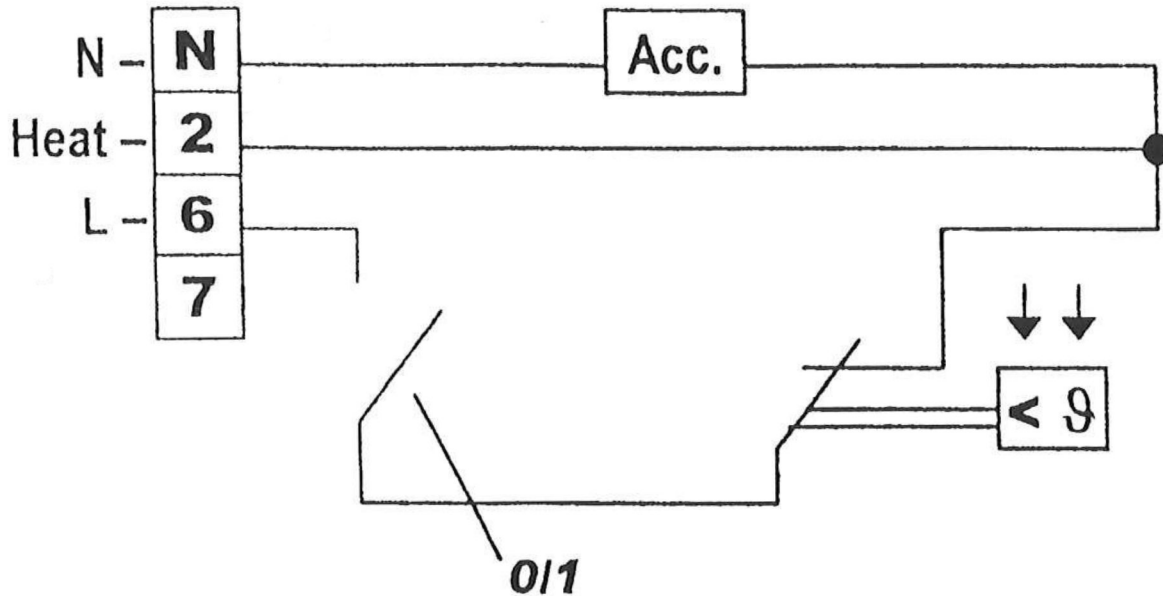

Voltage: 230V

Current: 16(4)A

Note: Dial is displayed in 5°C increments

Position 4 => 20°C

* See included document for approvals.